






## EasyStand Bantam Extra Small and Small Support Package Feature Descriptions





FEATURE	IMAGE	DESCRIPTION	MIN	MOD	MAX
<b>Foot Holders</b>		Foot Holders adjust forward and aft.	<b>X</b>		
<b>Multi-Adjustable Foot Plates</b>		Foot plates are adjustable forward/aft +/- .75" (2cm), plantar/dorsi +/- 20°, toe-in/toe-out, swivel 30° left/right, in addition to height.		<b>X</b>	<b>X</b>
<b>Secure Foot Straps</b>		Velcro® and D-ring adjustment holds feet in alignment with multiple attachment slots for proper foot positioning. Straps measured in length over top of foot, with approximately 1.5" (4cm) of Velcro overlap.		<b>X</b>	<b>X</b>
<b>Knee Pads</b>		Knee pads are height adjustable and slide-in/out for proper fit. Must choose size (measurement is inside width of knee pad) in drop box.	<b>X</b>		
<b>Swing-Away Knee Pads</b>		The push of a button swings knee pad away providing more room for transfers. Multi-adjustable knee pads are adjustable in swivel, height +/- .5" (+/-1.3cm), width between knee pads (measured from the center of one knee pad to the center of the other knee pad) 5.5"-10" (14-25cm) in addition to a depth adjustment range of 2.5"-8" (6-20cm). .). Must choose inside width of knee pads in drop box.		<b>X</b>	<b>X</b>

FEATURE	IMAGE	DESCRIPTION	MIN	MOD	MAX
<b>Planar Seat and Back</b>		Flat Seat and Back provide additional support. Must choose size in drop box. These measurements represent the distance from the seat to the top of the back and are given in a range because the seat back height is adjustable.	X		X
<b>Form to Fit Seat-</b>		Contoured positioning seat features form-to-fit upholstery with built in hip support. For Extra Small size model, seat size is 8.5-9.5"Wx9.5"L (22-24x24cm). For Small size model seat size is 11-13"Wx14"L (28-33x36cm).		X	
<b>Form to Fit Back</b>		Contoured back with form-to-fit upholstery provides midline support. Choose size in drop box. Measurements are taken from seat to top of back and are given in a range because back is height adjustable.		X	
<b>Easy Adjust Seat Depth</b>		Roller bearing seat depth allows for smoother seat depth adjustment.	X	X	X

FEATURE	IMAGE	DESCRIPTION	MIN	MOD	MAX
<b>Velcro® Positioning Belt</b>		2" (5cm) wide positioning belt has a D-ring Velcro closure, provides hip stability for the user. Must choose size in drop box.	X	X	X
<b>Chest Strap</b>		Velcro® and D-ring Adjustment Chest strap provides moderate support to help maintain the user's trunk in midline.	X		
<b>X-Style Chest Vest with High Mount Chest Vest Bracket</b>		Neoprene® with camlock adjustment, the X-Style Chest Vest provides anterior trunk support for the child through four points of control. Support is provided to help maintain the user's trunk in midline and shoulders back. Must choose size in drop box. The High Mount Chest Vest Bracket moves mounting points for chest vest higher to secure shoulder in position.		X	X
<b>Hip Supports</b>		Supports the hips in symmetrical alignment from sitting to standing. Adjustable width from 6"-9" (15-23cm) on extra small models and 8"-12" (20-30cm) on small models. 3 settings with a 2" (5cm) height range. Pad size is 3.5"x3.5" (9x9cm).			X

FEATURE	IMAGE	DESCRIPTION	MIN	MOD	MAX
<b>Lateral Supports</b>		<p>Provide midline positioning support for children with limited trunk control. Curved Pad size is 4”Hx6”W(10x15cm). Flat Pad size is 4”Hx6.25”W(10x16cm). Must choose Pad Shape and Width Adjustment Range in drop box.</p>			<b>X</b>
<b>Head Support</b>		<p>The Head Support offers posterior (behind) and lateral (side) support to the head to help maintain a well aligned midline position. Form to Fit model can be shaped for width to provide custom support. Must choose size in drop box</p>	<b>X</b>	<b>X</b>	<b>X</b>
<b>Black Molded Tray</b>		<p>Black Molded Tray is accessible in all positions and provides anterior support as user moves from sitting to standing or supine to upright. Adjustable in depth and height. Tray size is 11”x19” (28x48cm).</p>	<b>X</b>		
<b>Black Molded Swing-Away Tray</b>		<p>Swing-Away Tray is accessible in all positions and provides anterior support as user moves from sitting to standing or supine to upright. Adjustable in depth and height. Tray size is 11”x19” (28x48cm).</p>		<b>X</b>	

FEATURE	IMAGE	DESCRIPTION	MIN	MOD	MAX
<b>Clear Swing-Away Tray</b>		Clear Swing-Away Tray is accessible in all positions and provides anterior support as user moves from sitting to standing or supine to upright. Adjustable in depth, height and tray angle. Tray size is 11"x19" (28x48cm).			<b>X</b>
<b>Forearm Wings</b>		Forearm Wings give additional area to rest arms when in standing position.		<b>X</b>	<b>X</b>
<b>Gas Spring Lift with Foot Pedal</b>		The Gas Spring Lift Mechanism is used to adjust the angle and the position of the stander and is controlled by the Foot Pedal.	<b>X</b>	<b>X</b>	<b>X</b>
<b>Supine Positioning</b>		This feature allows the Bantam to be used as a supine or sit-to-stand stander. User can be transferred in flat-to-load, seated, or in a position where hips and knees are flexed. Adjusts from 0-90° supine.	<b>X</b>	<b>X</b>	<b>X</b>

FEATURE	IMAGE	DESCRIPTION	MIN	MOD	MAX
<b>Dual Control</b>		This feature allows both foot and hand control of the gas spring lift.			<b>X</b>
<b>Push Handle</b>		The Push Handle makes pushing the stander easier for the caregiver.			<b>X</b>
<b>Gas Spring Lockout-</b>		This feature locks gas spring in any position from lying down to fully upright positions.			<b>X</b>
<b>Swivel Castors</b>		Locking castors allow for easier steering and movement of the stander.	<b>X</b>	<b>X</b>	<b>X</b>